 
 
 
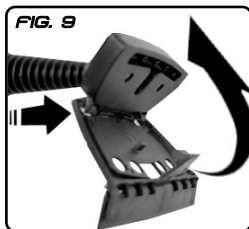 
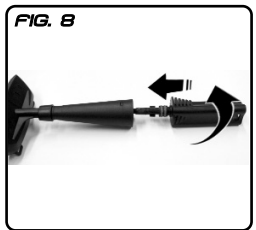 
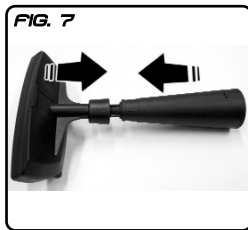 
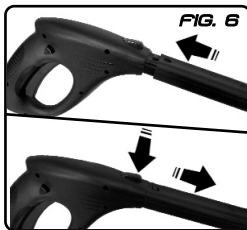 
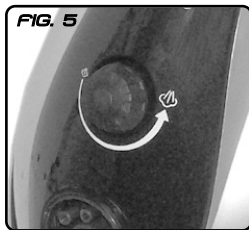 


Vaporetto[®]
COMFORT

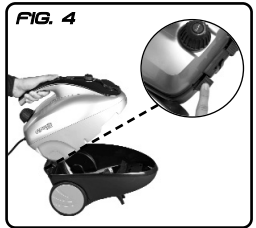

Vaporetto[®]
ONE

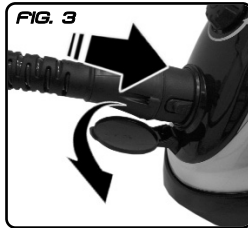

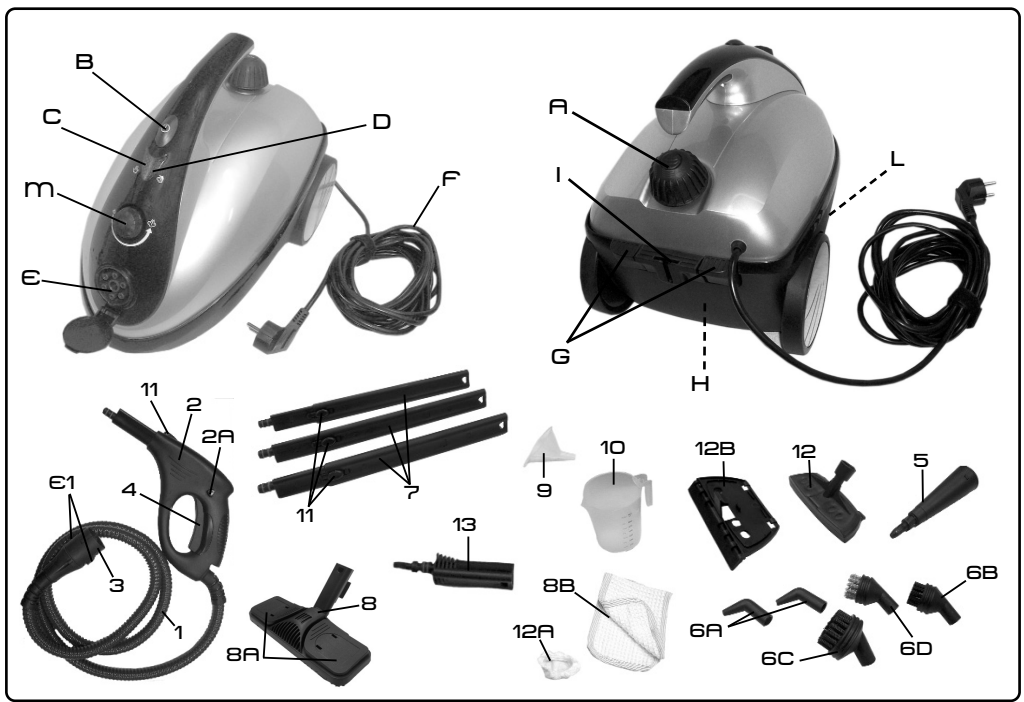

PRECAUTIONS

KEEP THESE INSTRUCTIONS

- Read these instructions carefully before using the appliance.
- Any use which does not comply with these instructions will invalidate the warranty.
- If this instruction manual is lost, it is possible to review it and/or download it from the web site www.polti.com
- Unpack the product and make sure it is intact as well as all the accessories listed in the key. If in doubt, do not use the product and contact an Authorized Service Centre.
- This appliance has been designed only for domestic use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- In case the appliance is accidentally dropped, it is necessary to have it checked by an authorized Service Centre as the internal safety features may have been affected.
- High-pressure jets can be dangerous if used improperly. Do not direct the steam jet at people, live electrical equipment or the appliance itself.
- Keep all the parts of the packaging out of the reach of children, they are not a toy. Keep the plastic bag out of the reach of children: danger of suffocation.



ATTENTION: High temperature. Risk of scalding!
If indicated do not touch the parts on the product



ATTENTION:
Risk of scalding!

SAFETY WARNINGS:**Risk of electric shock and/or short circuit:**

- The wiring system to which the appliance is connected must always comply with the laws in force.
- Before connecting the appliance, make sure that the mains voltage is the same as the voltage indicated on the data label of the appliance and that the power outlet is connected to earth.
- Always turn off the appliance at the on/off switch before unplugging it.
- If the appliance is left unused, always disconnect it from the mains. Never leave the appliance unattended with the cable plugged into the mains.
- Always make sure the appliance is unplugged before performing maintenance work of any kind.
- Do not pull the power cable out of the socket, but grasp the plug itself to avoid damage to the socket.
- Do not allow the power cable to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the appliance if the power cable or other important parts of the appliance are damaged. Instead, contact an authorised service centre.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
- Never touch the appliance with wet hands or feet with the cable plugged into the mains.
- Do not use the appliance when barefoot.
- Do not use the appliance near washbasins, bathtubs, showers or containers full of water.
- Never immerse the appliance, the cable or the plugs in water or another liquid.
- Do not direct the steam jet at live electrical and/or electronic equipment or at the appliance itself.

SAFETY WARNINGS:

Risk of injuries and/or burns when using the appliance:

- Use of the appliance in places where there is a danger of explosions is prohibited.
- Do not use the product with toxic substances.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but refer to an authorized Polti Service Centre.
- This appliance is equipped with safety devices which are to be replaced only by a suitably qualified technician.
- Before cleaning or storing the appliance, always first ensure that the appliance has cooled down completely.
- Do not direct the steam jet at people, animals or debris.
- Never place your hands inside the jet of steam.
- While refilling with water, switch off and disconnect the appliance from the mains.
- Do not use if the appliance has been dropped, has visible signs of damage or leaks.
- Before refilling the appliance when it is hot, allow it to cool for a few minutes.
- Keep your face away if you fill the boiler when it is still hot, the water can evaporate on contact with the hot boiler, causing a jet of steam.
When filling a hot boiler, we recommend adding small amounts of water to avoid the water evaporating instantly with the risk of burning.
- Do not empty the appliance when the water inside the boiler is still hot.
- Do not try to unscrew the cap when the appliance is in operation.
- Regularly check the status of the safety cap and seal, replace with original parts as necessary.
- Make sure the safety cap is screwed on properly, otherwise it may cause steam leaks.
- Do not force open the cap when there is a minimum pressure of steam in the boiler.
- Never leave the filling bottle or the funnel resting on the mouth of the boiler, with the product connected to the power supply, since this could cause burns.

SAFETY WARNINGS:using the appliance:

- This appliance has been designed to work with normal tap water. Absolutely do not use distilled water, dryer condensate water, perfumed water, rain water, battery water, water from air conditioning systems and the like. Do not use chemical substances or detergents.
- Do not use limescale products other than Kalstop FP2003.
- Never leave the appliance exposed to the weather.
- Do not place the appliance near a live element, an electric stove or any other source of heat.
- Do not expose the appliance to temperatures under 0°C or over 40°C
- Press the buttons only with a finger, without excessive force and avoid using a pointed object such as a pen.
- Do not wind the power cable around the appliance, especially when the appliance is still hot.
- To avoid prejudicing the safety of the appliance when repairing or replacing accessories, use only original spare parts.
- Let the appliance cool down before cleaning it.
- Before storing the appliance make sure that it has completely cooled down.
- It is necessary to keep the unit in horizontal position during operation.
- Always rest the appliance on a stable surface.
- Do not place the hot appliance on heat-sensitive surfaces.



Read these instructions carefully before using the appliance.

Dear Customer,

We want to thank you for the trust you've placed in us by purchasing this product and for having helping protect the most precious asset around us: **NATURE!** VAPORETTO solves all your cleaning and hygiene needs without the use of toxic detergents which damage our environment: water is turned into steam and cleans with a powerful and constant pressure. By taking advantage of this energy, VAPORETTO cleans deeply and is completely eco-friendly.

Our team of experts, when designing the appliance, provided extra tools to make your work safer and more efficient.

- The **Safety Cap**, prevents the appliance from opening accidentally until minimum pressure is reached inside the boiler.
- All components and accessories are built with high-quality, heat-resistant materials.

Polti products undergo rigorous testing. Vaporetto has also passed the **Splash Proof Test**, since it is designed to withstand jets.

VAPORETTO is built according to IEC international standards, and is equipped with a safety valve, a safety temperature switch and an additional temperature switch for extra protection against dry running.

We hope you enjoy your Polti product!

KEY

GENERATOR

- A) Safety cap
- B) ON/OFF switch
- C) ON lamp
- D) Steam pressure indicator lamp
- E) Moulded plug with splash-proof door
- E1) Sheath release button
- F) Power cable
- G) Accessories compartment lever
- H) Accessories compartment
- I) Rear holster
- L) Lower holster
- M) Steam control knob

ACCESSORIES

- 1) Sheath
- 2) Steam sprayer
- 2A) Safety button
- 3) Moulded plug
- 4) Steam control lever

- 5) Lance
- 6A) Curved tip for lance
- 6B) Small round brush with nylon bristles
- 6C) Large round brush with nylon bristles
- 6D) Small round brush with brass bristles
- 7) Extension tubes
- 8) Brush for floors
- 8A) Lever-type clasps
- 8B) Cloth for large brush
- 9) Funnel
- 10) Jug
- 11) Accessories locking key
- 12) Small brush
- 12A) Cloth for small brush
- 12B) Window-cleaning tool for small brush
- 13) Lance joint

CE This unit conforms with EC-directives 2004/108/CE (EMC) and 2006/95/CE (low voltage).

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

CORRECT USE OF THE PRODUCT

This appliance is intended for domestic use as a steam generator, in accordance with the descriptions and instructions contained in this manual. Please read these instructions carefully and keep them for future reference.

Polti S.p.A. declines all liability for any damage or accident deriving from any use of this appliance which is not in conformity with the instructions contained in this booklet.

ATTENTION

Directive 2002/96/EC (Waste Electrical and Electronic Equipment - WEEE): information for users

This product complies with EU Directive 2002/96/EC.



The crossed-out wastebasket symbol on the appliance means that at the end of its useful lifespan, the product must be disposed of separately from ordinary household wastes.

The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan.

Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. For more information on available collection facilities, contact your local waste collection service or the shop where you bought this appliance.

IMPORTANT

Before leaving our factory all our products are rigorously tested. Your Vaporetto may contain some residual water in the boiler from the factory testing.

PREPARATION FOR USE

- Unscrew the safety cap (A) (Fig.1) and fill the boiler with 1,6 litres of water, using the jug (10) and the funnel (9) provided for this purpose (Fig.2).

WARNING: When filling a hot boiler, we recommend adding small amounts of water to avoid the water evaporating instantly with the risk of burning.

This appliance has been designed to work with normal tap water.

However, since water contains limescale by nature, which may cause scaling in the long run, we recommend using a mixture of 50% tap water and 50% demineralised water or treated with water softener systems. To use tap water only and avoid scale formation, we recommend the addition of the special natural scale removal agent Kalstop FP2003.

Absolutely do not use distilled water, dryer condensate water, perfumed water, rain water, battery water, water from air conditioning systems and the like. Do not use chemical substances or detergents.

- Screw the cap (A) back in, making sure that it correctly tightened as far as it will go. If not, steam could escape from the opening. In this case turn off the appliance, unplug it from the mains and wait for it to cool before screwing the cap back on.
- Open the door of the one-piece socket (E); insert the moulded plug (3) until a click is heard (Fig.3). Make sure that it is firmly connected before proceeding any further. To release the sheath, simply press the release keys (E1) and at the same time remove the moulded plug (3).
- Plug the power cable (F) into a suitable earthed outlet.

NOTE: when filling, make sure that the water does not overflow, to avoid wetting the surface on which your Vaporella is resting

WARNING: Never leave the filling bottle or the funnel resting on the mouth of the boiler, with the product connected to the power supply, since this could cause burns.

ACCESSORIES COMPARTMENT (H)

The smaller accessories are stored in the compartment (H). To access it, activate the lever (G) while lifting the upper part of the device (Fig.4).

INSTRUCTIONS FOR USE

- Press the ON/OFF switch **(B)**. The power indicator light will come on **(C)**.
- Wait for the pressure indicator lamp **(D)** to light up (about 10 minutes). Vaporetto is now ready for use.
- The steam sprayer **(2)** has a safety button **(2A)** that prevents accidental activation of the steam delivery system by a child or other persons unaware of how the device works. To prevent the accidental output of steam press the button **(2A)**. To resume delivery press the button **(2A)** in the opposite direction and operate the steam control lever **(4)**.

The first jet of steam may contain some water droplets, due to imperfect thermic stabilisation inside the flexible hose. We would therefore advise that the first jet of steam is played onto an old cloth until a constant steam flow is obtained.

Note: The steam pressure indicator (D) may go on and off from time to time during use of Vaporetto, this is quite normal

VERY IMPORTANT WARNING: If you press the steam request lever **(4)** when the appliance is still under pressure, even if it is off and not connected to the wiring system, you may still experience steam escaping from the flexible hose. So when you switch off the appliance, before storing it, it is necessary to press the lever **(4)** till the steam flow is exhausted.

STEAM REGULATION FEATURE

VAPORETTOs are equipped with a steam regulator control **(M)** (Fig.5). You can increase the steam flow by turning the control in an anti-clockwise direction. Turning it in a clockwise direction reduces the steam flow. Here are some suggestions for the choice of steam flow level:

 
- **Strong steam:** for encrusted dirt, stains, sanitising, grease.
- **Normal steam:** for carpets, rugs, glass, tiles etc.
- **Delicate steam:** for vaporising plants and cleaning delicate fabrics, upholstery, wallpaper etc.

CONNECTION OF ACCESSORIES

- To connect the extension tubes **(7)** to the grip, the large brush **(8)** and the lance joint **(13)**, simply join them to one another until the accessory locking button **(11)** clicks into place (Fig. 6).
- To release the accessories simply hold the button **(11)** down and separate the components (Fig. 6).
- Before using the accessories, make sure that they are firmly in place.

SAFETY CAP / LACK OF WATER

This appliance is equipped with a safety cap which prevents the boiler being opened even accidentally, until minimum pressure is reached inside. This is indicated by a safety peg located on the cap which, when it comes out of the cap (Fig. A), indicates that there is still pressure inside the appliance. When it goes back completely into the cap (Fig. B), it indicates that there is no longer pressure in the appliance.

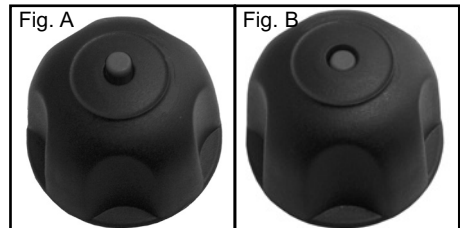

ATTENTION - Risk of burns:

Never force the cap open and never operate on the safety peg if the appliance is still on and connected to the mains or if it is still hot

Every time you want to open the safety cap, proceed as follows:

- **Switch off the machine at the on/off switch (B).**
- **Disconnect the power supply cable (F) from the mains.**
- Operate the steam control lever **(4)** on the steam sprayer **(2)** until steam stops flowing completely.
- Wait at least 15 minutes to allow the boiler to cool.
- Check that the peg has lowered.
- Unscrew anti-clockwise the patented safety cap **(A)**.
- Refill it by following the description of the PREPARATION paragraph.

WARNING: Not complying with this procedure can expose you to the risk of burns.

PRECAUTIONS FOR DELICATE SURFACES

- Before treating leather, special fabrics and wood surfaces, consult the manufacturer's instructions and always carry out a test on a hidden part or on a sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.
- Please pay careful attention when cleaning wooden and treated terracotta flooring as prolonged use of steam may damage the wax, polish or colour of the surfaces to be cleaned. We therefore recommend adjustment the steam to minimum (if your appliance has steam adjustment) and never direct the jet of steam directly on the surface, but cover the brush with a cloth. Do not keep spraying steam in the same place.
For wooden surfaces (furniture, doors, etc.), we recommend cleaning with a cloth which has been steamed previously.
- Also on particularly delicate surfaces (e.g. synthetic materials, lacquered surfaces etc.) it is recommended to always cover the brushes with a cloth and to use steam to a minimum.
- If cleaning glass surfaces in particularly low temperatures preheat the glass using the hand gun from about 50 centimetres distance from the surface to be cleaned.
- For care of your plants vaporise at a minimum distance of 50 centimetres.

PRACTICAL ADVICE FOR THE USE OF THE ACCESSORIES

STEAM GUN (2)

The handgun can be used directly, without connecting the brushes, on all spots requiring a stronger, closer treatment.

The more resistant the stain, the closer you should hold the gun, the steam pressure and temperature being higher at the source. You should however always wipe with a dry cloth (or a slightly abrasive sponge-if the spot is a difficult one to remove) after using the gun.

The steam gun is particularly efficient at:

- breaking down rug and carpet stains before they are treated with the large brush;

- cleaning stainless steel surfaces, panes, mirrors, enamelled surfaces;
 - cleaning hard-to-reach corners, such as stairs, window sills, door posts;
 - cleaning knobs of cookers, and water tap basis
 - cleaning window shutters, heaters, car interiors;
 - spraying plants (from a distance);
 - removing odours and creases from clothes.
- To reach higher points, the steam gun can be connected to one or both extension tubes.

FLOOR BRUSH (8)

- To clean floors, attach a dry, clean cloth to the brush and pass it moving from top to bottom without pressing. When one side is dirty, turn the cloth.
- Use the brush without cloth over dirty or scaled areas and over tile joints making lateral movements to lift the dirt.
- For vertical washable surfaces or upholstery and ceilings, cover the brush with a dry cloth and proceed as for the floor.
- On all types of synthetic or wool floor/wall carpets, as well as area rugs, Vaporetto ensures maximum hygiene, giving them back their original appearance and brightening up the colours. Run the brush without cloth over the surface to make dirt rise to the surface, cover the brush with a cotton cloth locking it in the relevant lever hooks (8A), then wipe the surface again to collect the dirt. Proceed rapidly and without pressing over the carpet, running the brush forward, backward and sideways without pausing too long at the same point. Treatment can be repeated as often as you like, with no danger for the surfaces. The drying is almost immediate. If the carpet is very dirty or saturated with cleaning products, do not to insist too much. Results will be evident only after a few uses of Vaporetto.
- To clean stubborn stains, before cleaning as indicated above, direct the steam directly onto the stain with the greatest possible angle (never vertically to the surface to be treated) and position a cloth beyond the stain, in order to collect up the dirt that has been "blown" away by the steam pressure.

SMALL BRUSH (12)

To connect the small brush to the sheath or to the extension tubes, first attach the lance (5) to the small brush (12) so that the two arrows found on the two components line up (Fig.7).

After this, insert the lance joint (13), turning it until it is hooked into place with the accessory (Fig. 8).

The small brush is used whenever the big brush is too big or impractical to be used.

The small brush can be used for:

- furnishing fabrics (after testing on invisible parts-see WARNINGS above at start of "TIPS FOR BETTER UNIT PERFORMANCE". DO NOT USE ON DRALON, VELVET OR OTHER SIMILAR PILE OR DELICATE SURFACES.
- small window surfaces
- tiles and other small surfaces

To clean wood (doorposts, floors etc) do not point the steam directly but cover the big or small brush with a double-folded cotton cloth.

For furniture cleaning direct the steam jet onto a dry cotton cloth, and then clean with the cloth. The warm moisture on the cloth traps the dust, spots and the static electricity so that the furniture stays clean longer as there is no detergent film for new dust to stick to..

The following two accessories can be applied to the small brush:

12A – Cloth for small brush: Fit the cloth over the small brush and clean the surfaces to be treated.

12B – Window-cleaning tool for small brush: Apply the tool to the small brush (without the cloth (12A)) as shown in Figure 9. Window-cleaning is carried out in two stages:

- Deliver of steam onto the surface to be cleaned, by operating the steam delivery lever (4), to dissolve the dirt;
- Pass the window-cleaning tool over the surface to remove the dirt, without delivering any more steam.

LANCE (5)

To connect the lance (5) to the sheath or extension tubes, first attach it to the lance joint (13). The lance can be used to direct the flow of steam towards hidden corners that are difficult to reach with the steam sprayer. It is ideal for clean-

ing radiators, door and window jambs, sanitary fixtures and shutters. It is an extremely useful and indispensable accessory. The following accessories can be fitted to the lance:

6A – Curved tip for lance: suitable for reaching even more inaccessible points, thanks to its curved shape.

6B - Small round brush and 6C - Large round brush - 6D) Brush with brass bristles: suitable for removing caked dirt from very narrow surfaces such as cooker burners, roller shutters, joints between tiles, sanitary fixtures, etc.

Select the most appropriate brush, based on the size and material of the surface to be treated.

To connect accessories **6A-6B-6C** or **6D** to the lance (5), simply fit these accessories onto the tip of the lance exerting a slight pressure (Fig.10).

STORING THE DEVICE

The device can be put away with the brush, tubes and sheath housed in holsters (I) and (L) as shown in fig. 11 and 12. The smaller accessories can be stored inside the accessories compartment (H).

WARNING: Some HOT water may leak out of the accessories mixed with the steam, especially when the tank has just been filled, while carrying out the cleaning operations and as a consequence of movement of the device.


KALSTOP

Water by its nature contains magnesium, mineral salts and other deposits which in hard water areas can contribute to limescale build up in the tank. In very hard water areas we recommend the use of our Kalstop FP2003, a special natural-base decalcifier which inhibits and breaks down limescale. This is a preventive against scale build-up and protects the metal walls of the boiler. Kalstop FP2003 can be found in small appliance stores, Polti service centres and on the web site www.polti.com

CARE OF YOUR APPLIANCE

- Before carrying out any maintenance on the device, always unplug it from the power mains making sure that the product has cooled down before proceeding.
- After using the brushes, allow the bristles to cool in their natural position, in order to avoid all deformation.
- To clean the body of the appliance, simply use a moist cloth.
- Clean accessories by rinsing them in running water.

TROUBLESHOOTING

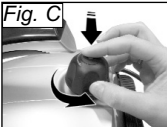PROBLEM	SOLUTION
ON lamp (C) off	<p>Check that the plug is properly connected to the mains socket.</p> <p>Ensure that the appliance has been turned on using the ON/OFF switch (B).</p>
ON lamp (C) on but no steam is delivered	<p>Wait for the Steam pressure indicator lamp (D) to turn on (approx. 10 minutes). If even once the lamp (D) is on, steam is still not delivered, there is no water in the boiler. Fill according to the instructions given in the manual.</p>
The safety cap cannot be unscrewed	<p>Follow the instructions found under "SAFETY CAP/LACK OF WATER".</p> <p>If the problem persists, wait at least 30 minutes, turn the appliance off and unplug, then unscrew the cap while gently pressing on the peg in the cap with your finger (see Fig. C)</p> <div data-bbox="888 1315 1060 1447" style="text-align: right;">  <p>Fig. C</p> </div>