 







Vaporetto®

SV100

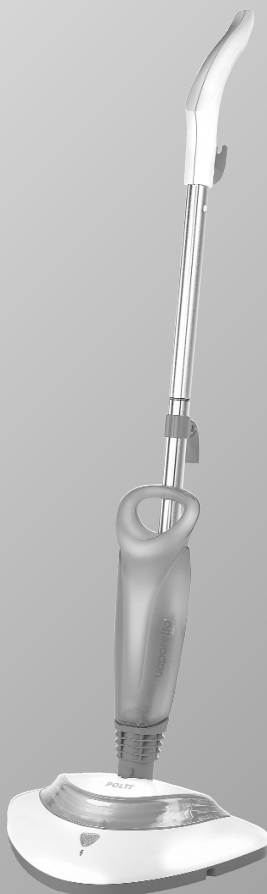

**REGISTER YOUR PRODUCT
REGISTRA IL TUO PRODOTTO
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTE O SEU PRODUTO**
www.polti.com

      **POLTI®**
NATURAL HOME FEELING

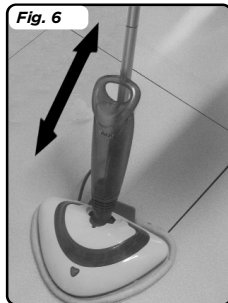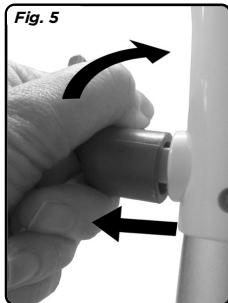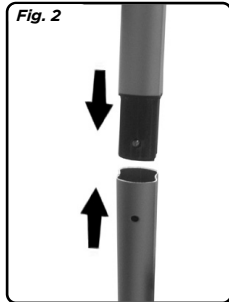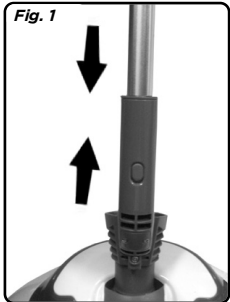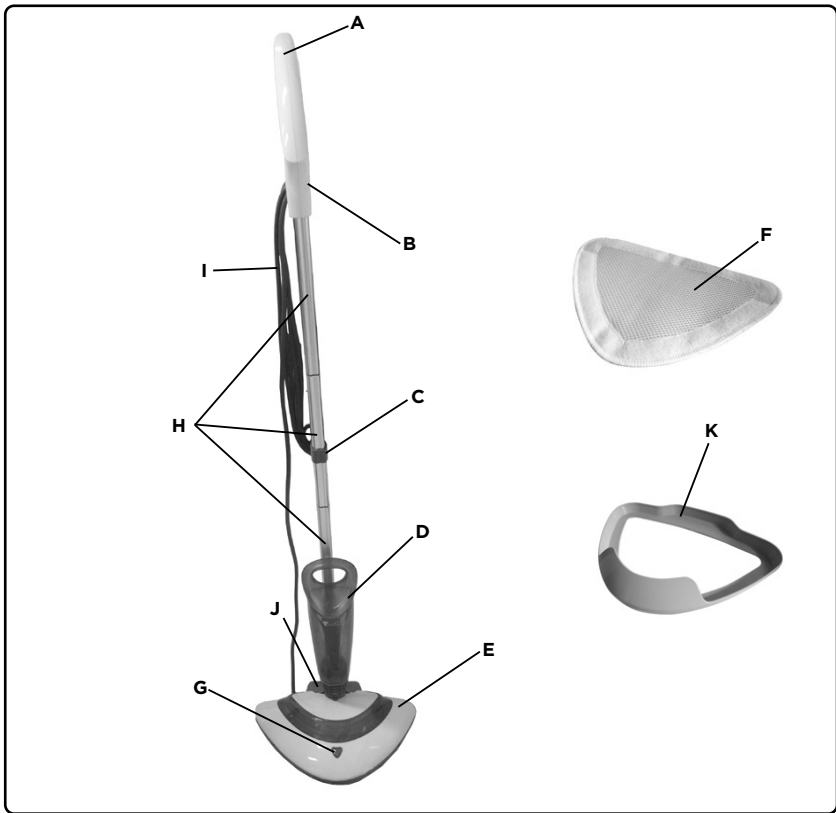



PRECAUTIONS

KEEP THESE INSTRUCTIONS

- Read these instructions carefully before using the appliance.
- Any use which does not comply with these instructions will invalidate the warranty.
- If this instruction manual is lost, it is possible to review it and/or download it from the web site www.polti.com
- Unpack the product and make sure it is intact as well as all the accessories listed in the key. If in doubt, do not use the product and contact an Authorized Service Centre.
- This appliance has been designed only for domestic use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- Children should be supervised to ensure that they do not play with the appliance.
- In case the appliance is accidentally dropped, it is necessary to have it checked by an authorized Service Centre as the internal safety features may have been affected.
- High-pressure jets can be dangerous if used improperly. Do not direct the steam jet at people, live electrical equipment or the appliance itself.
- Keep all the parts of the packaging out of the reach of children, they are not a toy. Keep the plastic bag out of the reach of children: danger of suffocation.

ENGLISH

	<p>ATTENTION: High temperature. Risk of scalding! If indicated do not touch the parts on the product</p>
	<p>ATTENTION: Risk of scalding!</p>

SAFETY WARNINGS:

Risk of electric shock and/or short circuit:

- The wiring system to which the appliance is connected must always comply with the laws in force.
- Before connecting the appliance, make sure that the mains voltage is the same as the voltage indicated on the data label of the appliance and that the power outlet is connected to earth.
- If the appliance is left unused, always disconnect it from the mains. Never leave the appliance unattended with the cable plugged into the mains.
- Always make sure the appliance is unplugged before performing maintenance work of any kind.
- Do not pull the power cable out of the socket, but grasp the plug itself to avoid damage to the socket.
- Do not allow the power cable to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the appliance if the power cable or other important parts of the appliance are damaged. Instead, contact an authorised service centre.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
- Never touch the appliance with wet hands or feet with the cable plugged into the mains.
- Do not use the appliance when barefoot.
- Do not use the appliance near washbasins, bathtubs, showers or containers full of water.
- Never immerse the appliance, the cable or the plugs in water or another liquid.
- Do not direct the steam jet at live electrical and/or electronic equipment or at the appliance itself.

SAFETY WARNINGS:

Risk of injuries and/or burns when using the appliance:

- Use of the appliance in places where there is a danger of explosions is prohibited.
- Do not use the product with toxic substances.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but refer to an authorized Polti Service Centre.
- Do not use if the appliance has been dropped, has visible signs of damage or leaks.
- This appliance is equipped with safety devices which are to be replaced only by a suitably qualified technician.
- Before cleaning or storing the appliance, always first ensure that the appliance has cooled down completely.
- Do not direct the steam jet at people, animals or debris.
- Never place your hands inside the jet of steam.
- While refilling with water, switch off and disconnect the appliance from the mains.

SAFETY WARNINGS:

using the appliance:

- The machine should be used exclusively with demineralised water. In order to avoid limescale build up, tap water must not be used.
- Absolutely do not use distilled water, dryer condensate water, perfumed water, rain water, battery water, water from air conditioning systems and the like. Do not use chemical substances or detergents.
- Never leave the appliance exposed to the weather.
- Do not place the appliance near a live element, an electric stove or any other source of heat.
- Do not expose the appliance to temperatures under 0°C or over 40°C
- Do not wind the power cable around the appliance, especially when the appliance is still hot.
- To avoid prejudicing the safety of the appliance when repairing or replacing accessories, use only original spare parts.
- Let the appliance cool down before cleaning it.
- Before storing the appliance make sure that it has completely cooled down.
- Keep the device out of the reach of children, when it is on and during cooling.



Read these instructions carefully before using the appliance.

Dear Customer,

We want to thank you for the trust you've placed in us by purchasing this product and for helping protect the most precious asset around us: **NATURE!** VAPORETTO solves all your cleaning and hygiene needs without the use of toxic detergents which damage our environment: the water is turned into steam which allows deep cleaning and is completely eco-friendly.

In designing the appliance, our team of experts has developed extra tools to make it safer and more efficient.

- All components and accessories are built with high-quality, heat-resistant materials.

Please also visit our website www.polti.com, where you can find all the information and advice necessary to better use the product, and where you can register your newly purchased product to receive exclusive benefits.

KEY

- A) Handle
- B) Upper cable rewind
- C) Lower cable rewind
- D) Water tank
- E) Floor brush
- F) Microfibre cloth
- G) Power indicator
- H) Handle components
 - I) Power supply cable
- J) Bristles for cleaning stubborn dirt
- K) Frame for rugs

CE This unit conforms with EC-directives 2004/108/CE (EMC) and 2006/95/CE (low voltage).

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

CORRECT USE OF THE PRODUCT

This appliance is intended for domestic use as a steam generator, in accordance with the descriptions and instructions contained in this manual. Please read these instructions carefully and keep them for future reference.

Polti S.p.A. declines all liability for any damage or accident deriving from any use of this appliance which is not in conformity with the instructions contained in this booklet.

ATTENTION

Directive 2002/96/EC (Waste Electrical and Electronic Equipment - WEEE): information for users

This product complies with EU Directive 2002/96/EC.



The crossed-out wastebasket symbol on the appliance means that at the end of its useful lifespan, the product must be disposed of separately from ordinary household wastes.

The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan.

Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. For more information on available collection facilities, contact your local waste collection service or the shop where you bought this appliance.

IMPORTANT

Before leaving our factory all our products are rigorously tested. This is the reason why your Vaporetto may contain some residual water in the tank (D).

PREPARATION

- Remove the appliance from the packaging, checking that the product is whole and that

all the parts are there.

- Connect the handle to the brush (Fig. 1), making sure that the pin on the handle matches up with the hole on the brush.
- Connect the other parts of the handle together (Fig. 2), making sure that the pin on the handle matches up with the hole on the other handle.

Remove the water tank (D) from the appliance pulling it upward (Fig. 3). Unscrew the cap (Fig. 4).

- Fill the container with water. Water, by nature, contains limescale which, as time goes by, can cause problems. To protect your appliance, use demineralised water. Do not add other substances or additives to the tank.
- Screw the cap back on the tank and hook it back on the appliance.
- Position the cloth (F) under the brush (E). To attach the cloth (F), just place it with the cleaning side resting on the floor, and place the brush on top (E). To remove the cloth, place your foot on the excess part of the cloth and remove the brush by pulling upwards.

Warning: Do not use the appliance without the cloth.

USE

- Plug the power lead (I) into a suitable socket with an earth connection. The power indicator will come on (G).
- The power indicator light (G) will remain on constantly, indicating that the appliance is connected to the mains.
- After about one minute, the appliance is ready to use.
- Place your foot on the brush (E) and, at the same time, tilt the handle. With the handle tilted, the steam will start to come out. To stop the steam, just return the handle to the initial position.
- Clean the floors by moving the brush (Fig. 6).

Note: Steam only comes out with movement. If the brush stays still, the steam stops coming out.

- For stubborn dirt, return the handle to the vertical position and press down on the rear bristles of the floor brush (J) with your foot, scraping the dirt. After which, tilt the handle and brush over again normally (Fig. 7).
- To clean rugs and carpets, rest the brush (with the cloth attached) on the special frame (K) so that it can slide over the surface.

Warning:

- **To remove the cloth from the brush, unplug the power supply from the electric socket and wait a few minutes to allow the cloth to cool.**

LACK OF WATER

The water level is always visible thanks to the transparent tank.

When the water inside the tank (D) has been used up, steam will stop being released.

To restart operations, just fill up the water tank (D) again, as described in the paragraph "PREPARATION".

Warning: This must always be done after having disconnected the appliance from the mains.

PRECAUTIONS FOR DELICATE SURFACES

- Before treating leather, special fabrics and wood surfaces, consult the manufacturer's instructions and always carry out a test on a hidden part or on a sample of the material. Allow the steamed part to dry to make sure that no changes in colour or deformations have occurred.
- Please pay careful attention when cleaning treated wood or terracotta flooring, as prolonged use of steam may damage the wax, polish or colour of the surfaces to be cleaned.

We therefore recommend adjustment the steam to minimum (if your appliance has

steam adjustment) and never direct the jet of steam directly on the surface, but cover the brush with a cloth. Do not keep spraying steam in the same place.

- Also on particularly delicate surfaces (e.g. synthetic materials, lacquered surfaces etc.), the brush should always be covered with a cloth.

STORING THE DEVICE

Before replacing the appliance:

- Unplug the power supply from the mains.
- Completely empty the water tank (D) to avoid water leaks.
- Before detaching the cloth from the brush, wait a few minutes to allow it to cool.
- Wind the power cable around the special cable rewinds (B) and (C).

Warning:

- **Before using the appliance again, remember to unwind the power cable completely. The upper cable winder (B) rotates 180° in order to wind up the power cable quickly.**
- **Do not keep the appliance connected to the power supply with the cable wound up.**

CARE OF YOUR APPLIANCE

- **Before carrying out any maintenance on the device, always unplug it from the power mains making sure that the product has cooled down before proceeding.**
- To clean the body of the appliance, simply use a moist cloth. Do not use solvents or detergents, which may harm the body material.
- The cloths provided can be washed by following the instructions included on the label.

VAPORETTO SV100

TROUBLESHOOTING

PROBLEM	SOLUTION
No steam is coming out	<ul style="list-style-type: none">- Check that the cable is correctly plugged into a suitable mains socket.- Ensure that there is water in the tank (D).- Ensure that the tank is correctly inserted.- Move the appliance.
The product releases too much water onto the floor	<ul style="list-style-type: none">- Check that the tank (D) is assembled correctly.

WARRANTY**WARRANTY CONDITIONS**

For repairs, the appliance must be accompanied by proof of purchase.

Polti products are guaranteed to the original purchaser for two years from the date of purchase as shown on a valid receipt issued by the seller.

This guarantee does not affect the consumer's rights under European Directive 99/44/CE regarding certain aspects of the sale and guarantee of consumer goods; consumers should address claims under these provisions to the retailer where they purchased the goods.

This guarantee is effective in countries where European Directive 99/44/CE has been implemented. Local guarantee legislation applies in all other countries.

WHAT THE WARRANTY COVERS

During the guarantee period, Polti will repair products with defects in workmanship or materials at no charge to the customer for either labour or materials.

In case of irreparable defects, Polti S.p.A. may replace the product free of charge.

A minor patent defect for which it was not possible, or is excessively expensive, to repair or replace does not give the right to terminate the contract.

To have work performed under this guarantee, consumers must contact an Authorised Polti Technical Assistance Centre. The consumer must present a valid receipt issued by the seller at the time of purchase as evidence of the date of purchase; without proof of purchase and the relative date, the work will be charged. Therefore, please store your receipt carefully for the entire warranty period.

WHAT THE WARRANTY DOES NOT COVER

The warranty is subject to limitations and does not cover defects due to improper use or use other than that indicated in the instruction booklet which forms an integral part of the sales contract of the product. The warranty does not cover defects resulting from force majeure (fires, short circuits) or caused by third parties (tampering). The warranty does not cover damages caused by the use of non-original Polti parts, repairs or alterations performed by staff or service centres not authorised by Polti.

The guarantee does not cover parts that are damaged by wear or subject to normal wear (consumables such as filters, brushes, etc.). The guarantee doesn't cover any possible damage caused by limescale. Polti will accept no responsibility for any injury to people or animals or damage to objects directly or indirectly resulting from failure to follow the instructions provided in the instruction booklet, in particular the warnings and product maintenance instructions.

The warranty does not cover the assembly of accessories that have been modified or are not adapted to the appliance.

 
REGISTER YOUR PRODUCT

Register your appliance on our website at www.polti.com.

You will receive an email containing a promotional code and the instructions for taking advantage of the current offers.


To register your Polti product, you must enter, in addition to your personal information, the appliance serial number (SN) which you will find on the silver label, located under the product:


Example:

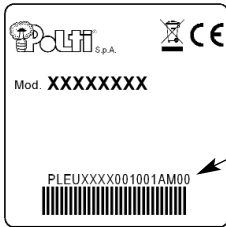

SERIAL NUMBER
(18 digit) SN

 To save time and keep your serial number to hand, write it in the space provided on the back cover of this manual.

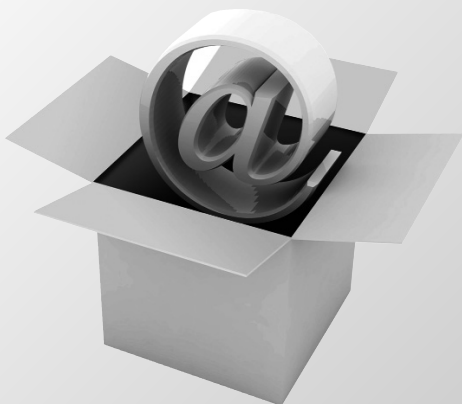

SN: 

**REGISTER YOUR PRODUCT
REGISTRA IL TUO PRODOTTO
ENREGISTREZ VOTRE PRODUIT
REGISTRA TU PRODUCTO
GERÄTREGISTRIERUNG
REGISTE O SEU PRODUTO**

www.polti.com

**YOU WILL ENJOY SPECIAL OFFERS
POTRAI USUFRUIRE DI OFFERTE SPECIALI
VOUS POURREZ BÉNÉFICIER D'OFFRES EXCLUSIVES
PODRÁ DISFRUTAR DE OFERTAS ESPECIALES
SIE KÖNNEN DIE SONDERANGEBOTE NUTZEN
VOCÊ APRECIARÁ AS NOSSAS OFERTAS ESPECIAIS**

CALL CENTER

ITALIA SERVIZIO CLIENTI	848 800 806
FRANCE SERVICE CLIENTS	04 786 642 10
ESPAÑA SERVICIO AL CLIENTE	02 351 227
PORTUGAL SERVIÇO AO CLIENTE	707 780 274
UK CUSTOMER CARE	0845 177 6584
DEUTSCHLAND KUNDENDIENST	03222 109 069 6

OTHER COUNTRIES, PLEASE VISIT WWW.POLTI.COM



**Polti S.p.A. - Via Ferloni, 83
22070 -Bulgarograsso (CO) - Italy**